






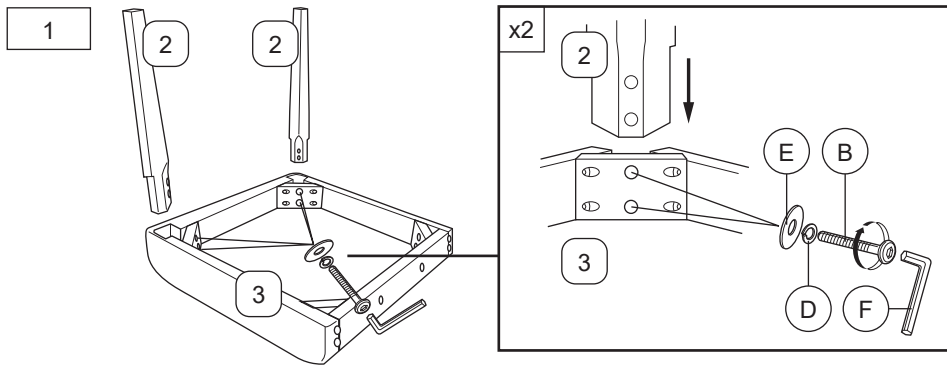

MODEL: TOMGR / TOMVE


ASSEMBLY INSTRUCTION

- Important note: - Place all wooden part on a clean and smooth surface such as rug or carpet to avoid the part from being scratch.
- Please follow the assembly instruction step by step.
 - Do not tighten all screw until the chair is fully set-up.




No	Hardware List	Qty.
A	JCBC M6 x 80mm 	8 pcs
B	JCBC M6 x 50mm 	8 pcs
C	JCBC M6 x 40mm 	4 pcs
D	M6 Spring Washer 	20 pcs
E	M6 Flat Washer 	20 pcs
F	M4 Allen Key 	1 pc

No	Part List	Qty.
1	Backrest	2 pcs
2	Front Leg	4 pcs
3	Cushion Seat	2 pcs

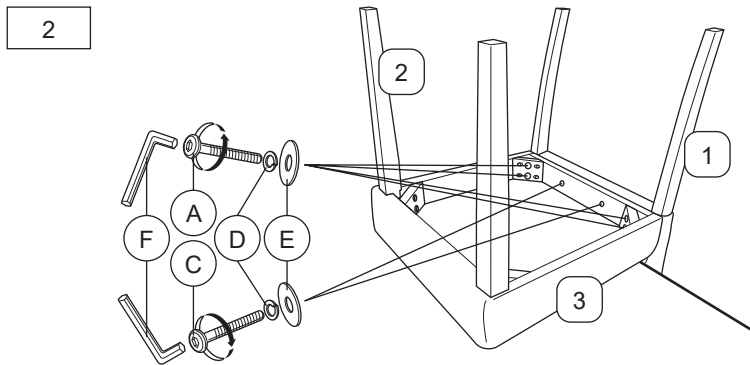


COMPLETED ASSEMBLY

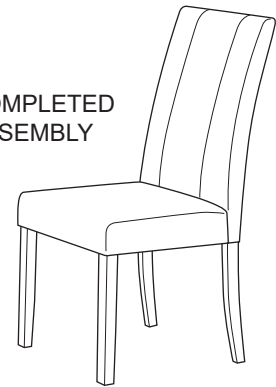





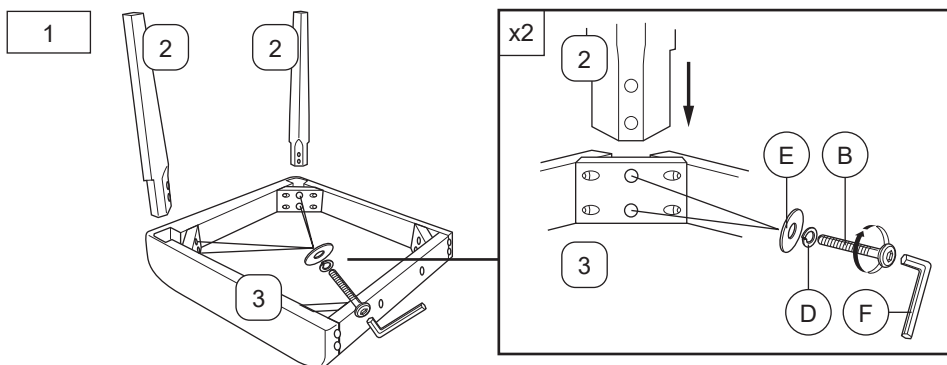

MODEL: TOMGR / TOMVE


ASSEMBLY INSTRUCTION

- Important note: - Place all wooden part on a clean and smooth surface such as rug or carpet to avoid the part from being scratch.
- Please follow the assembly instruction step by step.
 - Do not tighten all screw until the chair is fully set-up.



No	Hardware List	Qty.
A	JCBC M6 x 80mm 	8 pcs
B	JCBC M6 x 50mm 	8 pcs
C	JCBC M6 x 40mm 	4 pcs
D	M6 Spring Washer 	20 pcs
E	M6 Flat Washer 	20 pcs
F	M4 Allen Key 	1 pc

No	Part List	Qty.
1	Backrest	2 pcs
2	Front Leg	4 pcs
3	Cushion Seat	2 pcs

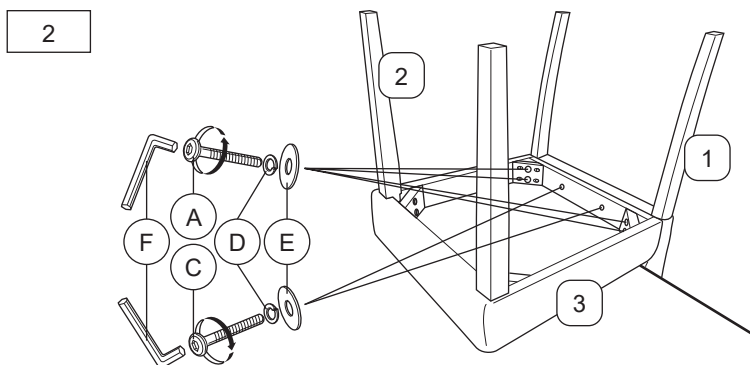

COMPLETED ASSEMBLY

